

Installing the Ethernet Laser Label

This document provides instructions for applying the Ethernet Laser Rack label supplied in the kit only for Mirage SST IMXB faceplates. Discard the label for all other products.

Affected products

The following products are affected:

- Mirage SST

Required components


The following components and tools are required.

- PCB CPU Board (IMXB) P/N: 003-112351-05
- Label INFO Ethernet Laser Rack P/N: 013-104034-01

Installing the Ethernet Laser Label

Install the new Ethernet Laser Label to mask the existing screen-printed text.

1. Clean the surface of the IMXB faceplate.
2. Peel the adhesive backing off the Ethernet Laser Label.
3. Apply the new label over top of the existing screen-printed label on the IMXB faceplate.

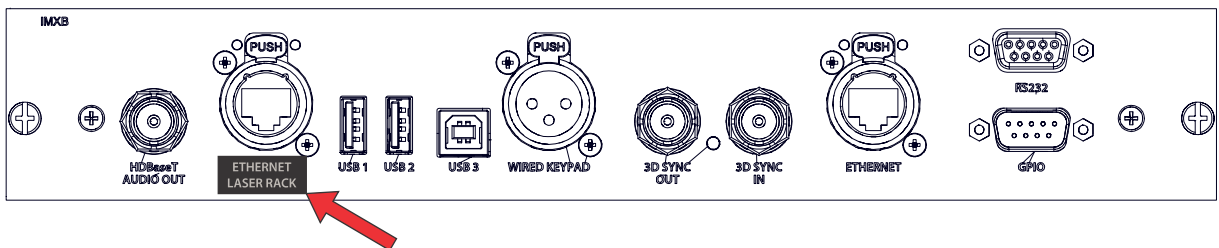

Technical support

Technical support for Christie products is available at:

- North and South America: +1-800-221-8025 or Support.Americas@christiedigital.com

- Europe, Middle East, and Africa: +44 (0) 1189 778111 or *Support.EMEA@christiedigital.com*
- Asia Pacific: +65 6877-8737 or *Support.APAC@christiedigital.com*