

# L2K1000 Lamp Replacement Instruction Sheet

## INTRODUCTION

These instructions outline the details for Lamp replacement in the L2K1000 projector (Model No. 103-031105-XX). **NOTICE:** Use only a Christie approved Lamp Kit for your specific projector model.

## KIT REQUIRED

003-120598-XX (Replacement Lamp)

## INSTRUCTIONS


### LAMP REPLACEMENT

When the projection lamp reaches its end of life, the Lamp replacement icon appears on the screen and the LAMP 1/ REPLACE or LAMP 2/REPLACE indicator is orange. Replace the lamp with a new one promptly. The timing for illumination of the lamp replacement indicator depends on the lamp mode.


**⚠ DANGER** Allow the projector to cool for at least 45 minutes before the lamp cover is opened. The inside of the projector can become very hot and may cause injury.

**NOTICES:** 1) Switch the lamp OFF before opening the lamp cover. 2) For continued safety, replace with a lamp assembly of the same type. 3) Do not drop the lamp assembly or touch a glass bulb! The glass can shatter and may cause injury.

**NOTE:** The Lamp replacement icon will not appear when the Display function is set to “Off”, or during “Freeze”.

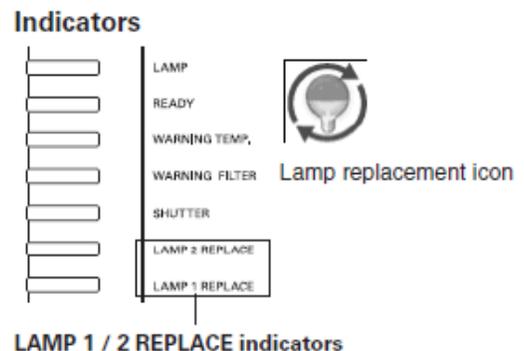

1. Use the Lamp Status Display to verify which lamp (1 or 2) requires replacement.
2. Press the Side Control ON/STANDBY button twice to switch the projector OFF. Let the projector cool for at least 45 minutes (READY indicator will be green).
3. Switch the Main ON/OFF Switch to OFF and unplug the AC power cord from the AC outlet.
4. Loosen the lamp cover screw and slide the lamp cover away from the projector. Then lift the cover until it locks into place in the open position.
5. Loosen the 2 screws securing the lamp to be replaced and pull the lamp up by grasping the handle.
6. Install the new lamp and make sure the lamp is properly seated. Tighten the 2 screws.
7. Close the lamp cover and tighten the screw.
8. Connect the AC power cord to the projector and switch the Main ON/OFF Switch to ON.
9. Press the ON-STANDBY button to switch the projector ON.
10. Reset the Lamp Replacement Counter (see instructions below).

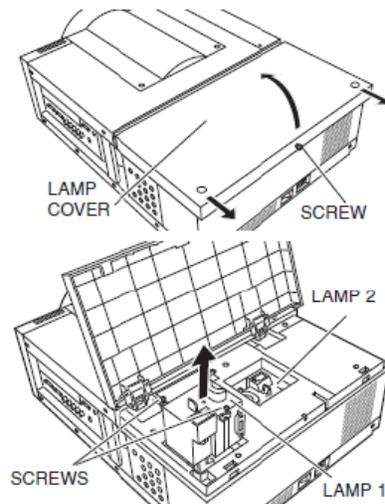

Make sure which number of lamp needs to be replaced on Lamp Status Display. Figure shows case of replacing LAMP 1.

**⚠ WARNING** Do Not operate the projector while any of the lamps are removed. This may result in malfunctions, fire hazard, or other possible accidents.

**NOTE:** To maintain picture quality (better balance of color and brightness on entire screen), we recommend replacing both lamps at one time.

## RESETTING THE LAMP COUNTER

Make sure the Lamp counter is reset after a lamp is replaced. When the Lamp counter is reset, the LAMP 1/REPLACE or LAMP 2/REPLACE indicator will switch off and the Lamp replacement icon will disappear.

1. Press the MENU button on the side-control to display the On-Screen Menu. Use the Point ◀▶ buttons to move the red frame pointer to the Setting Menu icon.
2. Use the Point ▲▼ buttons to move the red frame pointer to Lamp counter and then press the Select button. A dialog box appears. Select a lamp to display “Lamp replacement counter Reset?”. Select [Yes] to continue.
3. In the confirmation dialog box, select [Yes] to reset the Lamp counter.

**NOTE:** Do not reset the Lamp counter without replacing a lamp.

