The background of the page features a repeating pattern of hexagons in three colors: dark blue, light gray, and cyan. The hexagons are arranged in a staggered, non-uniform grid that spans the entire page. The colors transition from dark blue on the left side to light gray in the center, and finally to cyan on the right side, creating a visual gradient.

Installation and Setup Guide
020-100632-06

Christie Rack Mount Pedestal

CHRISTIE®

NOTICES

COPYRIGHT AND TRADEMARKS

Copyright © 2026 Christie Digital Systems USA Inc. All rights reserved.

All brand names and product names are trademarks, registered trademarks or trade names of their respective holders.

GENERAL

Every effort has been made to ensure accuracy, however in some cases changes in the products or availability could occur which may not be reflected in this document. Christie reserves the right to make changes to specifications at any time without notice. Performance specifications are typical, but may vary depending on conditions beyond Christie's control such as maintenance of the product in proper working conditions. Performance specifications are based on information available at the time of printing. Christie makes no warranty of any kind with regard to this material, including, but not limited to, implied warranties of fitness for a particular purpose. Christie will not be liable for errors contained herein or for incidental or consequential damages in connection with the performance or use of this material. Our centers of excellence for manufacturing in Kitchener, Ontario, Canada and in Shenzhen, China are ISO 9001:2015 Quality Management System-certified.

Christie is committed to making our documents free from language bias; however, we are not responsible for the language used on any linked or third-party documentation.

For the most current technical documentation and office contact information, visit <https://www.christiedigital.com/>.

Warranty

Products are warranted under Christie's standard limited warranty, the details of which are available at <https://www.christiedigital.com/help-center/warranties/> or by contacting your Christie dealer or Christie.

PREVENTATIVE MAINTENANCE

Preventative maintenance is an important part of the continued and proper operation of your product. Failure to perform maintenance as required, and in accordance with the maintenance schedule specified by Christie, voids the warranty. For preventative maintenance schedules, refer to www.christiedigital.com.

REGULATORY

The product has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the product is operated in a commercial environment. The product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of the product in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at the user's own expense. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

CAN ICES-3 (A) / NMB-3 (A)

이 기기는 업무용(A급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

ENVIRONMENTAL



The product is designed and manufactured with high-quality materials and components some of which can be recycled and reused. This symbol means electrical and electronic equipment, at their end-of-life, should be disposed of separately from regular waste. Please dispose of the product appropriately and according to local regulations. In the European Union, separate collection systems are for used electrical and electronic products.

If printing this document, consider printing only the pages you need and select the double-sided option.

Please help us to conserve the environment we live in!

Notation

Learn the hazard and information symbols used in the product documentation.

Danger messages indicate a hazardous situation which, if not avoided, results in death or serious injury.

Warning messages indicate a hazardous situation which, if not avoided, could result in death or serious injury.

Caution messages indicate a hazardous situation which, if not avoided, could result in minor or moderate injury.


Notice messages indicate a hazardous situation which, if not avoided, may result in equipment or property damage.

Information messages provide additional information, emphasize or provide a useful tip.

China RoHS compliance information

关于中国《电子信息产品污染控制管理办法》的说明

- Environmentally Friendly Use Period
环保使用期限

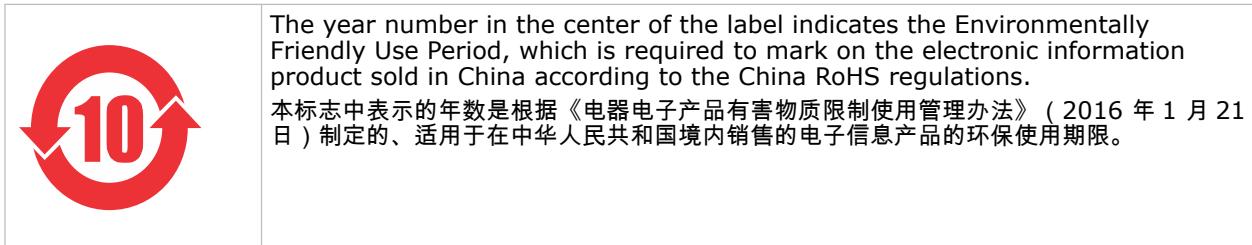

- Material Concentration Values Table
有毒有害物质含量表

Part name	部件名称	Material Concentration (有毒有害物质或元素)					
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr 6+)	多溴联苯 (PBB)	多溴二联苯醚 (PBDE)
AC circuit breaker	电路开关	X	O	O	O	O	O
Ballast	镇流器	X	O	O	O	O	O
Blower/Fan	吹风机/风扇	X	O	O	O	O	O
Electronic Module	电子控制组件	X	O	O	O	O	O
Harness/cable	连接电线/缆	X	O	O	O	O	O
Illumination optics system	照明光学系统	X	O	X	O	O	O
Integrated Cinema Processor	集成处理板	X	O	O	O	O	O
Line filter	滤波器	X	O	O	O	O	O
Liquid cooling system	液体冷却系统	O	O	O	O	O	O
Low voltage power supply	低压电源	X	O	O	O	O	O
Mechanical enclosure*	机械附件	X	O	O	O	O	O
PCB board (FEF, MDMB, Light Sensor)	电路板	X	O	O	O	O	O
Power supply	电源	X	O	O	O	O	O
Projection lens	投影镜头	X	O	X	O	O	O
Projector Intelligence Board	智能板	X	O	O	O	O	O
Remote control	遥控器	X	O	O	O	O	O
Remote control IR	红外线遥控器	X	O	O	O	O	O
Sensor	传感器	O	O	O	O	O	O
Signal extender	信号延长器	X	O	O	O	O	O
Software CD	软件光盘	O	O	O	O	O	O
Speaker/Subwoofer	扬声器	O	O	O	O	O	O
Standby LVPS	备用低压电源	X	O	O	O	O	O

Part name	部件名称	Material Concentration (有毒有害物质或元素)					
		铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr 6+)	多溴联苯 (PBB)	多溴二联苯醚 (PBDE)
Switch	开关	X	O	O	O	O	O
Switch interlock	开关安全锁	X	O	O	O	O	O
Touch Panel Controller	触摸控制屏	X	O	O	O	O	O

Note:

This table is prepared in accordance with the provisions of SJ/T 11364.

本表格依据 SJ/T 11364 的规定编制。

O: indicates said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

表示该有害物质在该部件所有均质材料中的含有均在 GB/T 26572 规定的限量要求以下。

X: indicates said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

表示该有害物质至少在该部件的某一均质材料中的含有超出 GB/T 26572 规定的限量要求。

* This part uses metallic alloys, which may contain Lead. 因该部件使用金属合金材料, 故可能含有铅。

Content

Introduction	6
Affected products.	6
Key features.	6
What is in the box?	6
Pedestal components.	7
Pedestal component mounting options.	8
Technical support.	8
Installation and setup	9
Initalling the pedestal feet and casters.	9
Adjusting the pedestal height.	10
Positioning the pedestal.	12
Leveling the pedestal.	13
Installing the foot brackets.	13
Installing the projector foot locks.	15
Configuring the rack for side-mounting.	16
Troubleshooting	19
Projector feet do not extend or contract.	19
How do I install the lamp power supply?	19
Specifications	20
Supported projectors.	20
Physical specifications.	22

Introduction

The Christie Rack Mount Pedestal is designed to hold any Christie Solaria Series or DLP Cinema projector. This guide provides instructions for installing and adjusting the Christie Rack Mount Pedestal.

Affected products

The following products are affected:

- CP2220
- CP2230
- CP2406-RBe
- CP2409-RBe
- CP2411-RBe
- CP2415-RGB
- CP2415-Xe
- CP2420-RGB
- CP2420-Xe
- CP4220
- CP4230
- CP2309-RGB
- CP2315-RGB
- CP2320-RGB
- CP4315-RGB
- CP4330-RGB
- CP4410m-RGBH
- CP4415-RGB Gen1
- CP4415-RGB Gen2
- CP4415m-RGBH
- CP4420-RGB Gen1
- CP4420-RGB Gen2
- CP4420m-RGBH
- CP4420-Xe
- CP4425-RGB
- CP4430-RGB
- CP4435-RGB
- Solaria One
- Solaria One+

Key features

Understand the important features of the pedestal.

- Adjustable height of 109.3 to 139.2 cm (43 to 55 inches)
- Casters
- Projector foot locks
- Panel locks
- 30 RU of space for rack accessories (12 RU with a lamp power supply)
- Convenient cable routing and access

What is in the box?


The following components are shipped for the Christie Rack Mount Pedestal (P/N: 108-416102-XX). Verify you have all these items before installing the pedestal.

- 1 Christie Rack Mount Pedestal body
- 4 foot brackets
- 4 foot locks
- 2 vertical supports

- 4 feet
- 4 casters
- 1 bag of hardware

Pedestal components


Identify the main components of the pedestal.

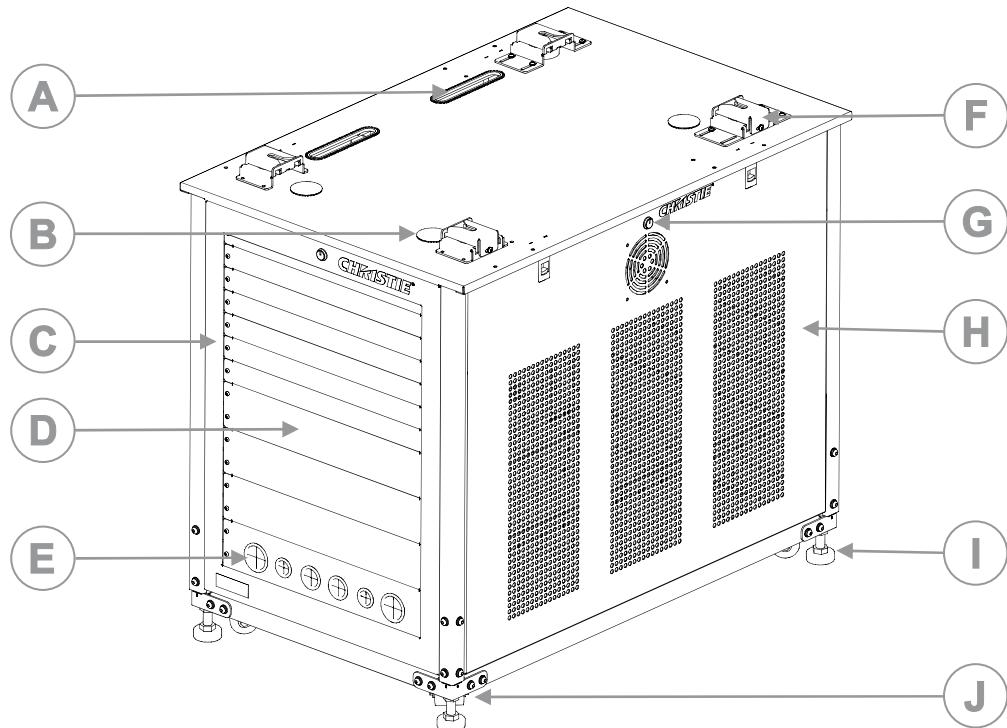

ID	Component
A	Wire access slot (1 of 2)
B	Wire access plug (1 of 3)
C	Security rail (1 of 2)
D	Space panel (1 of 10)
E	Rubber grommets (1 of 6)
F	Projector foot bracket and projector foot locks (1 of 4)
G	Key lock (1 of 4)
H	Side panel (1 of 2)
I	Leveling foot (1 of 4)
J	Caster (1 of 4)

Pedestal component mounting options

Identify the Christie Rack Mount Pedestal component mounting options.

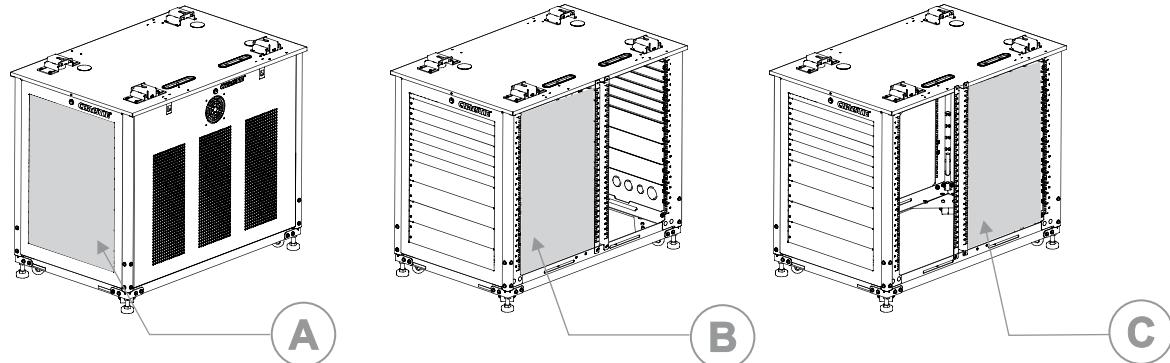

ID	Mounting option
A	Back mounting
B	Front-side mounting
C	Back-side mounting

Technical support

Technical support for Christie Cinema products is available at:

- *Support.cinema@christiedigital.com*
- +1-877-334-4267

Installation and setup

Learn how to install and position the Christie Rack Mount Pedestal.
Complete the procedures in the order they are provided.

Initalling the pedestal feet and casters


As a first step, install the pedestal feet and casters.




Warning! If not avoided, the following could result in death or serious injury.

- Two or more people are required to safely lift and install the Christie product.

1. Position the pedestal upside down.
2. Pre-assemble the leveling feet:
 - a) Thread one M16 lock nut onto each of the four leveling feet.
 - b) Adjust the space between the lock nut and the head of the leveling foot until it is approximately 6 cm (2.5 inches).

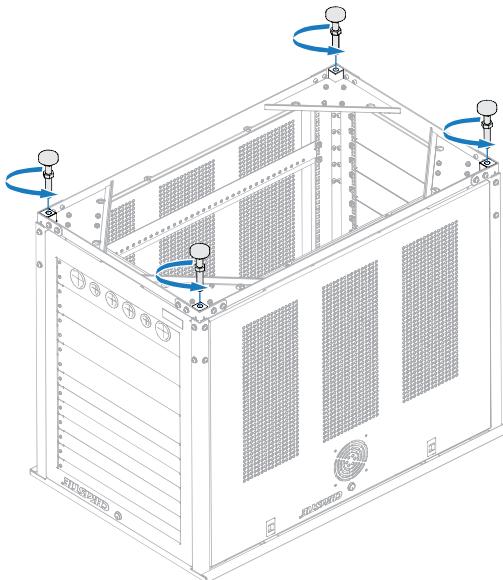

3. Thread one leveling foot into each of the four corners of the pedestal.
4. Optionally, attach one caster to each of the four corners of the pedestal using four screws for each caster.

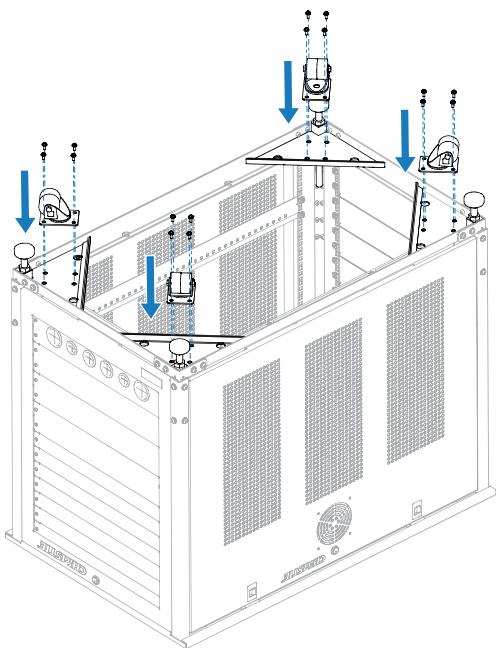

Adjusting the pedestal height


Adjust the pedestal height, so when in use the center of the projector lens points to the center or above the center of the port window.



Warning! If not avoided, the following could result in death or serious injury.

- Two or more people are required to safely lift and install the Christie product.

1. Remove the four screws from each of the four outside bottom corners of the pedestal.

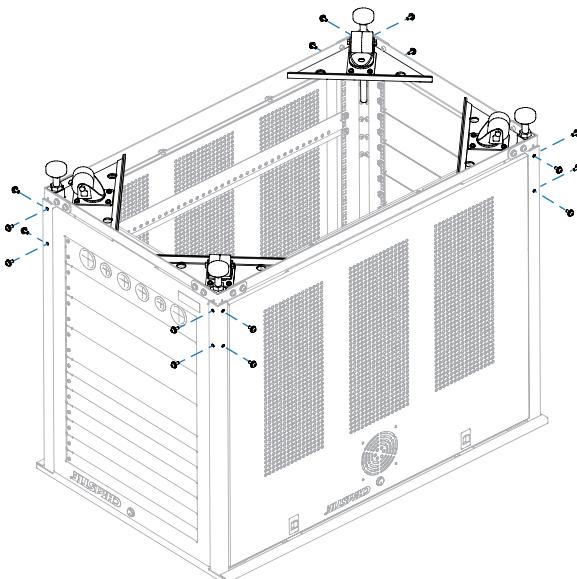

2. Measure the distance from the center of the port window to the floor.

This is the approximate height required to center the projector lens with the port window. Use the chart below to determine the required leg extension position for your projector.


Approximate height to center of projector lens	Leg extension position (in mm)
CP2220, CP2230, CP2420-Xe, CP4220, CP4230, and CP4420-Xe	
111.5 to 116.4 cm (43.9 to 45.8 inches)	0
116.5 to 121.4 cm (45.9 to 47.7 inches)	50
121.5 to 126.4 cm (47.8 to 49.7 inches)	100
126.5 to 131.4 cm (49.8 to 51.7 inches)	150
131.5 to 136.5 cm (51.8 to 53.7 inches)	200
CP2210, CP2406-RBe, CP2409-RBe, CP2411-RBe, CP2415-Xe, Solaria One, and Solaria One+	
112.6 to 117.5 cm (44.3 to 46.2 inches)	0
117.6 to 122.5 cm (46.3 to 48.1 inches)	50
122.6 to 127.5 cm (48.2 to 50.1 inches)	100
127.6 to 132.5 cm (50.2 to 52.1 inches)	150
132.6 to 137.6 cm (52.2 to 54.1 inches)	200
CP2309-RGB, CP2315-RGB, CP2320-RGB, CP2415-RGB, and CP2420-RGB	
106.6 to 111.5 cm (41.9 to 43.9 inches)	0
111.6 to 116.5 cm (43.9 to 45.8 inches)	50
116.6 to 121.5 cm (45.9 to 47.8 inches)	100
121.6 to 126.5 cm (47.9 to 49.7 inches)	150
126.6 to 131.5 cm (49.8 to 51.8 inches)	200
CP43xx-RGB and CP44xx-RGB	
115.4 to 120.3 cm (45.4 to 47.8 inches)	0
120.4 to 125.3 cm (47.9 to 50.3 inches)	50
125.4 to 130.3 cm (50.4 to 52.8 inches)	100
130.4 to 135.3 cm (52.9 to 55.3 inches)	150
135.4 to 140.3 cm (55.4 to 57.8 inches)	200
CP4410m-RGBH, CP4415m-RGBH, and CP4420m-RGBH	
108 to 112.9 cm (42.5 to 44.4 inches)	0
113 to 117.9 cm (44.5 to 46.4 inches)	50
118 to 122.9 cm (46.5 to 48.3 inches)	100
123 to 127.9 cm (48.4 to 50.3 inches)	150
128 to 132.9 cm (50.4 to 52.3 inches)	200



- Height may vary due to the variations in the projector foot height.
- Caster removal subtracts 1.7 cm (0.7 inches) from the minimum heights.
- Pedestal feet provide an additional 5 cm (2.5 inches) of leveling adjustment.

For example, if the distance from the center of the port window to the floor is 125 cm (49.2 inches) for a CP4230, set the leg extension position to 100 mm.

3. Slide up the bottom frame (containing the pedestal feet) of the pedestal.

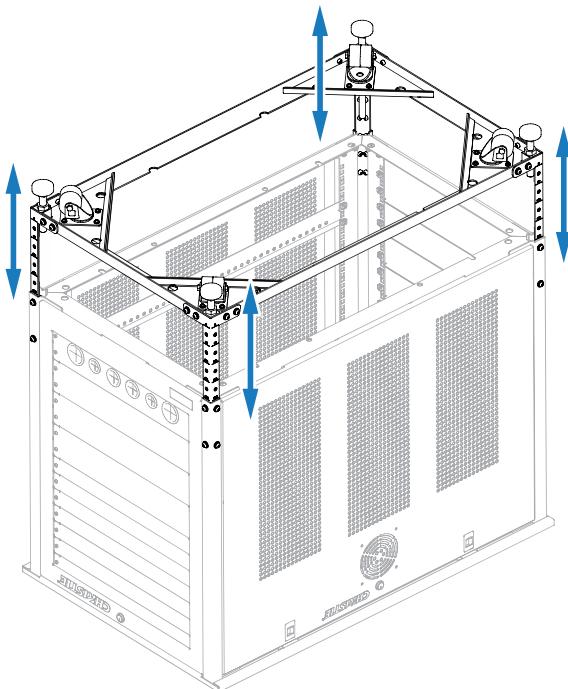

4. Make sure all four corners of the pedestal are adjusted to the same leg extension position.
5. To hold the extended frame in position, install the four screws into each of the four outside bottom corners of the pedestal.
6. Turn the Christie Rack Mount Pedestal over so its feet or casters are on the floor.

Positioning the pedestal

Position the pedestal in the location where it will be used.

Place the pedestal in front of the port window so the front of the stand (the side with the rubber grommets) faces the port window.

Leveling the pedestal


The Christie Rack Mount Pedestal feet provide a 5 cm (2.5 inches) range of leveling adjustment.



Warning! If not avoided, the following could result in death or serious injury.

- Do not use the leveling feet to tilt or angle the rack stand.
- **TIP HAZARD!** Install each pedestal foot correctly by sufficiently screwing the leveling feet into the base of the pedestal to provide rack stability.

1. Loosen one lock nut on each of the four pedestal feet using a 24 mm (15/16 inch) wrench.

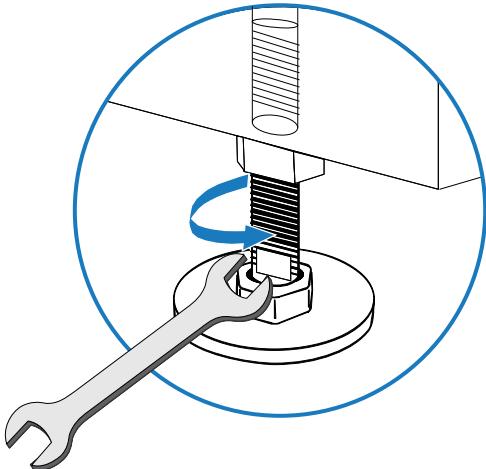

2. Place a leveling device on top of the pedestal.
3. Adjust the height of each pedestal foot until the leveling device indicates the pedestal is level. Turn the feet on the bottom of the pedestal clockwise or counter-clockwise 1/8th of a turn at a time to extend or retract them.
4. Tighten one lock nut on each of the four pedestal feet.
5. Secure the pedestal feet to the floor.

The hardware to secure the pedestal feet to the floor is not provided in the Christie Rack Mount Pedestal kit (P/N: 108-416102-XX). Contact Christie Technical Support to order the Anchor Bottom Pedestal Foot kit (P/N: 163-161109-XX).

Installing the foot brackets

Learn how to install the pedestal foot brackets.



Warning! If not avoided, the following could result in death or serious injury.

- Two or more people are required to safely lift and install the Christie product.

1. Determine the bracket location for your projector model.

CP43xx-RGB and CP44xx-RGB models—Use the Rack Stand Adapter bracket (P/N: 163-101103-XX) and follow the product's instructions to use the brackets with the rack stand in the *Installing the rack stand adapter instruction sheet* (P/N: 020-102715-XX).


CP2415,-RGB, CP2420-RGB, and CP23xx-RGB models—Use the Rack Stand Adapter bracket (P/N: 163-111104-XX) and follow the product's instructions to use the brackets with

the rack stand in the *Installing the rack stand adapter instruction sheet* (P/N: 020-102912-XX).

CP4410m,-RGBH, CP4415m-RGBH, and CP4420m-RGBH models—Use the Rack Stand Adapter bracket (P/N: 153-146102-XX) and follow the product's instructions to use the brackets with the rack stand *Installing the CP44xxm-RGBH Rack Stand Adapter kit instruction sheet* (P/N: 020-104159-XX).


CP22xx, CP42xx, CP24xx-RBe, CPxx-Xe, and Solaria One models

The following image shows the bracket locations for the CP22xx, CP42xx, CP24xx-RBe, CPxx-Xe, and Solaria One models:

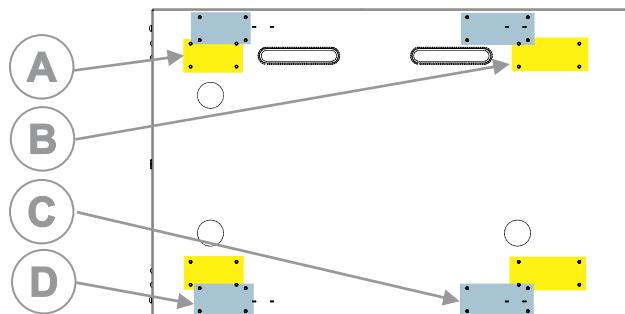

ID	Foot location	Model
A	Front	CP2220, CP2230, CP2420-Xe, CP4220, CP4230, and CP4420-Xe
B	Rear	CP2220, CP2230, CP2420-Xe, CP4220, CP4230, and CP4420-Xe
C	Rear	CP2210, CP2406-RBe, CP2409-RBe, CP2411-RBe, CP2415-Xe, Solaria One, and Solaria One+
D	Front	CP2210, CP2406-RBe, CP2409-RBe, CP2411-RBe, CP2415-Xe, Solaria One, and Solaria One+

2. Align the foot brackets with the holes on the top of the pedestal.
Position the brackets with the flat portion of the bracket facing in.

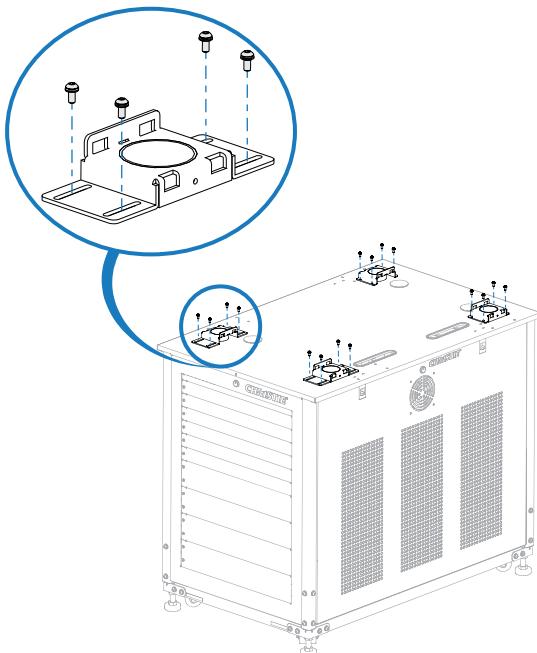


3. Loosely install the four screws in each of the four foot brackets.
4. With two or more people, place the projector on top of the Christie Rack Mount Pedestal. If required, adjust the foot bracket location to accommodate the projector.
5. Tighten the foot bracket screws.
6. Adjust the projector feet to obtain the required height and tilt of the projector. See your projector manual for adjustment instructions.
7. Make sure enough space is provided between the projector and the foot brackets. This space is required to install the projector foot bracket locks.

Installing the projector foot locks

The foot locks secure the projector feet into position.

1. Slide the projector foot lock over the projector foot bracket.

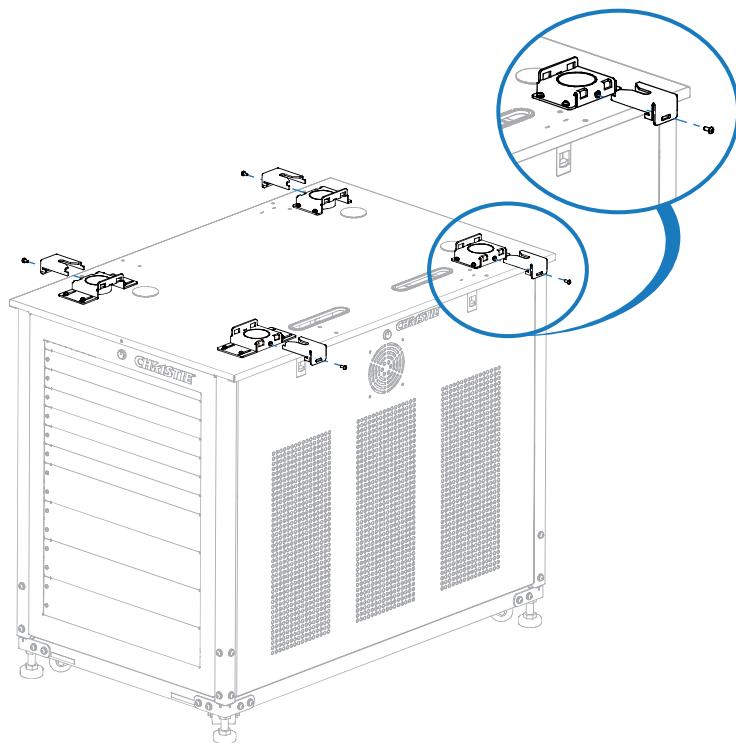


2. Install one screw in each of the four projector foot locks to secure them in position.


Configuring the rack for side-mounting

By default, the Christie Rack Mount Pedestal is configured for back-mounting of components. Complete this procedure if side-mounting of components is required.

1. Remove the side panel from each side of the rack.
 - a) Unlock the side panel.
 - b) Press down on the two panel latches and tip the panel away from the rack.
 - c) Lift the panel up and out from the rack and set aside.
 - d) For the second panel, repeat steps a to c.

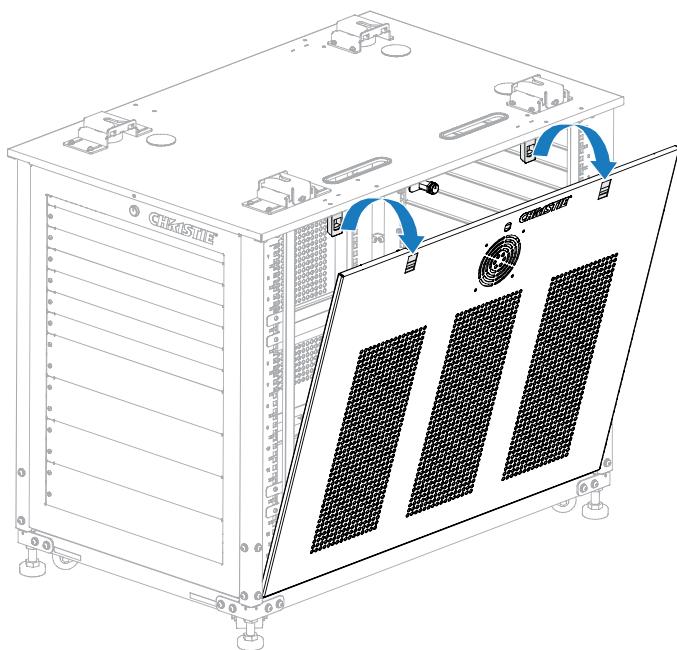


2. Remove the two horizontal supports from each side of the rack.

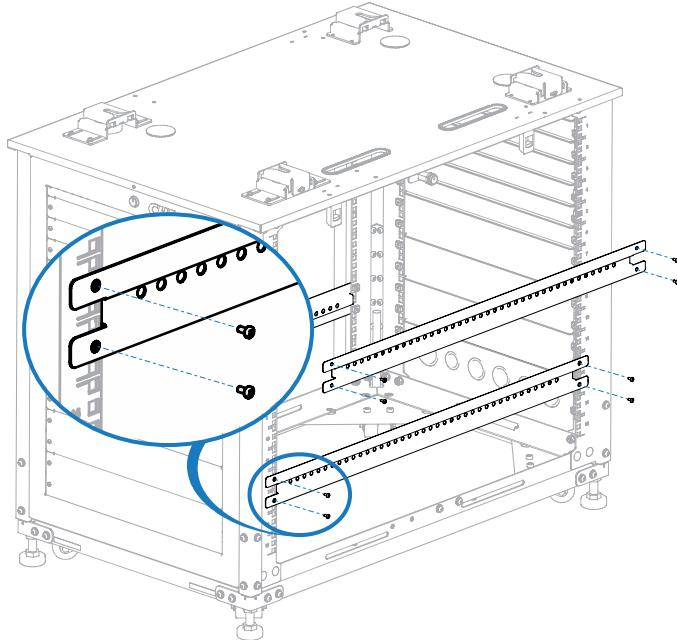

- a) Remove the two screws from each end of the horizontal support.
b) Set the horizontal support aside.
c) For the remaining three horizontal supports, repeat steps a and b.
3. Install one vertical support on each side of the rack using two screws, two lock washers, and two washers in each of the four mounting holes.

As illustrated in the images below, make sure both vertical supports are installed using the front or using the back side-mounting holes. Vertical support placement determines whether components are installed at the front or the back side-mounting location.

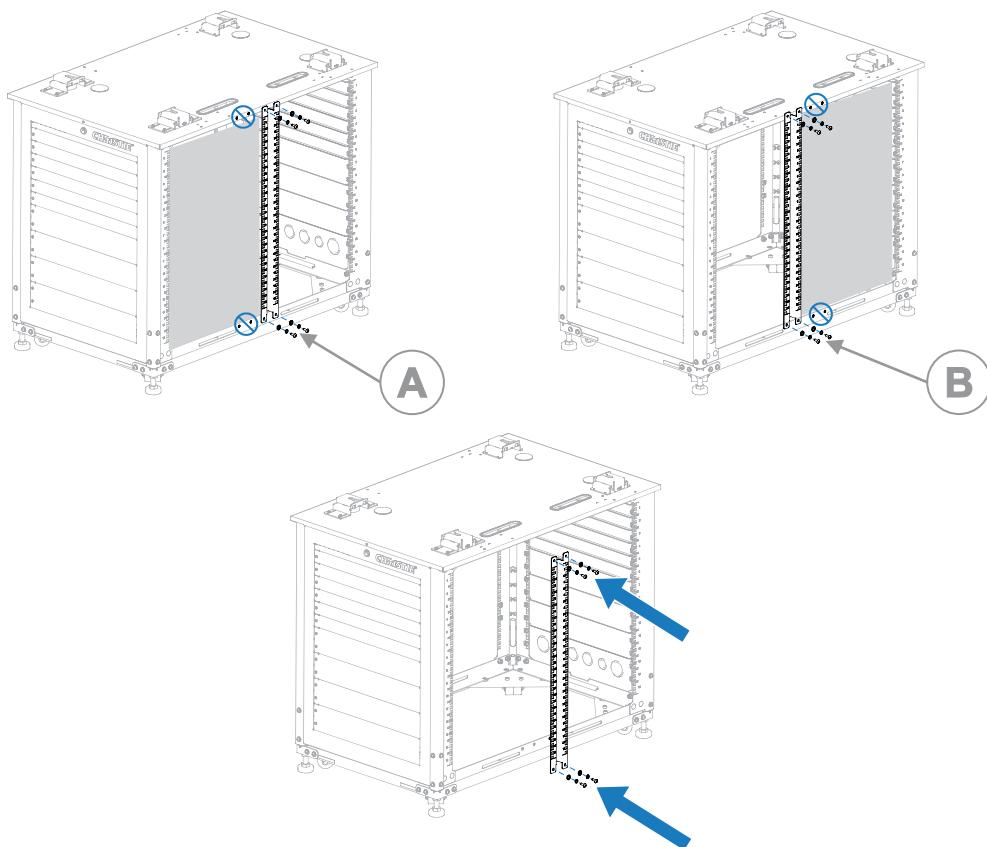

A Vertical support installed in the front mounting holes

B Vertical support installed in the back mounting holes

4. If required, install components.
5. Replace the side panels removed in step 1.

Troubleshooting

This section provides information and procedures for resolving common pedestal issues. If an issue cannot be resolved or you cannot find the issue in this section, contact Christie Technical Support.

Projector feet do not extend or contract

The projector feet do not extend or contract.

Resolution

Make sure the projector foot locking nut is all the way down and loose.

How do I install the lamp power supply?

The lamp power supply (LPS) installation instructions are not provided in this guide.

Resolution

Refer to your projector's User manual for information on how to install the lamp power supply.

Specifications

Learn about the product specifications. Due to continuing research, specifications are subject to change without notice.

Supported projectors

The following projectors can be used with the Christie Rack Mount Pedestal.



Caution! If not avoided, the following could result in minor or moderate injury.

- The Christie Rack Mount Pedestal is intended for use with only the projector models listed below. Use with other equipment may result in instability causing injury.

Projector	Length	Width	Height	Weight	Part number
Solaria One	696.0 mm (27.4 inches)	688.3 mm (27.1 inches)	396.2 mm (15.6 inches)	57.8 kg (119.0 lbs)	138-001102-XX (Discontinued)
Solaria One+	695.96 mm (27.4 inches)	688.3 mm (27.1 inches)	396.2 mm (15.6 inches)	55.8 kg (123.0 lbs)	138-001113-XX (Discontinued)
CP2210	665.48 mm (26.2 inches)	688.3 mm (27.1 inches)	396.2 mm (15.6 inches)	43.5 kg (96.0 lbs)	127-001102-XX (Discontinued)
CP2220	1176.0 mm (46.3 inches)	640.1 mm (25.2 inches)	480.0 mm (18.9 inches)	116.0 kg (256.0 lbs)	127-002103-XX (Discontinued)
CP2230	1193.8 mm (47 inches)	635.0 mm (25 inches)	482.6 mm (19 inches)	111.0 kg (245.0 lbs)	127-003104-XX (Discontinued)
CP4220	1338.6 mm (52.7 inches)	650.0 mm (25.6 inches)	482.6 mm (19 inches)	111.0 kg (245.0 lbs)	129-001102-XX (Discontinued)
CP4230	1369 mm (53.9 inches)	650.0 mm (25.6 inches)	482.6 mm (19 inches)	111.0 kg (245.0 lbs)	129-002103-XX (Discontinued)
CP2315-RGB	1083.5 mm (42.7 inches)	635.0 mm (25.0 inches)	343.0 mm (13.5 inches)	79.0 kg (174.0 lbs)	163-010102-XX
CP2320-RGB	1083.5 mm (42.7 inches)	635.0 mm (25.0 inches)	344.0 mm (13.5 inches)	80.0 kg (176.0 lbs)	163-006107-XX
CP2309-RGB	1083.5 mm (42.7 inches)	635.0 mm (25.0 inches)	345.0 mm (13.5 inches)	74.3 kg (164.0 lbs)	163-019101-XX
CP2406-RBe	688.0 mm (27.1 inches)	665.0 mm (26.2 inches)	395.0 mm (15.6 inches)	54.0 kg (119.1 lbs)	153-022105-XX
CP2409-RBe	688.0 mm (27.1)	665.0 mm (26.2 inches)	395.0 mm (15.6 inches)	54.0 kg (119.1 lbs)	153-023106-XX

Projector	Length	Width	Height	Weight	Part number
CP2411-RBe	688.0 mm (27.1)	665.0 mm (26.2 inches)	395.0 mm (15.6 inches)	57.0 kg (125.7 lbs)	153-024107-XX
CP2415-RGB	1083.5 mm (42.7 inches)	635.0 mm (25.0 inches)	343.0 mm (13.5 inches)	79.0 kg (174.0 lbs)	163-010102-XX
CP2415-Xe	688.0 mm (27.1 inches)	665.0 mm (26.2 inches)	395.0 mm (15.55 inches)	51.2 kg (113.0 lbs)	127-013105-XX
CP2420-RGB	1083.5 mm (42.7 inches)	635.0 mm (25.0 inches)	344.0 mm (13.5 inches)	80.0 kg (176.0 lbs)	163-006107-XX
CP2420-Xe	1175.0 mm (46.3 inches)	644.0 mm (25.35 inches)	479.8 mm (18.89 inches)	116.0 kg (255.0 lbs)	127-012104-XX
CP4420-Xe	1176.0 mm (46.3 inches)	644.0 mm (25.35 inches)	479.8 mm (18.89 inches)	118.0 kg (260.0 lbs)	129-019101-XX
CP4315-RGB	954.5 mm (37.6 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	123 kg (271 lbs)	163-008109-XX
CP4320-RGB	954.5 mm (37.6 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	123.0 kg (271.0 lbs)	163-007108-XX
CP4330-RGB	954.5 mm (37.6 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	123.0 kg (271.0 lbs)	163-020103-XX
CP4410m-RGBH	850 mm (33.5 inches)	620 mm (24.4 inches)	332.2 mm (13.1 inches)	TBD	153-038102-XX 153-042107-XX
CP4415-RGB Gen1	944.7 mm (37.2 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	99.0 kg (218.0 lbs)	163-025108-XX
CP4415-RGB Gen2	944.7 mm (37.2 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	99.0 kg (218.0 lbs)	163-025108-XX
CP4415m-RGBH	850 mm (33.5 inches)	620 mm (24.4 inches)	332.2 mm (13.1 inches)	63.28 kg (139.5 lbs)	153-035109-XX 153-043108-XX
CP4420-RGB Gen1	944.7 mm (37.2 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	100.0 kg (220.0 lbs)	163-026109-XX
CP4420-RGB Gen2	944.7 mm (37.2 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	100.0 kg (220.0 lbs)	163-026109-XX
CP4420m-RGBH	850 mm (33.5 inches)	620 mm (24.4 inches)	332.2 mm (13.1 inches)	64.64 kg (142.5 lbs)	153-036100-XX 153-044109-XX
CP4425-RGB	944.7 mm (37.2 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	121.0 kg (267.0 lbs)	163-057103-XX
CP4430-RGB	944.7 mm (37.2 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	116.5 kg (257.0 lbs)	163-032106-XX

Projector	Length	Width	Height	Weight	Part number
CP4435-RGB	944.7 mm (37.2 inches)	711.0 mm (28.0 inches)	525.1 mm (20.7 inches)	121.0 kg (267.0 lbs)	163-056102-XX

Physical specifications

Learn the dimensions and weight of the pedestal.

Description	Dimensions
Height (with castors)	87.7 to 103.2 cm (34.5 to 40.6 inches)
Height (without castors)	84 to 103.2 cm (33 to 40.6 inches)
Width	67.6 cm (26.6 inches)
Length	103.4 cm (40.7 inches)
Weight	70 kg (154 lbs)