
SOFTWARE RELEASE NOTES

Entero HB Bootloader v2

Applies to the Following Products	Prepared For
<ul style="list-style-type: none">• Entero HB RPMSP-LED02• Entero HB RPMHD-LED02• Entero HB RPMWU-LED02	Internal and External Operators and Service Technicians

This document provides information about updating the Entero HB Bootloader to version 2.0.

Prerequisites

- Entero HB firmware v1.2.x or later

Update instructions

Download the bootloader update

1. Browse to the bootloader update file on www.christiedigital.com.
2. Download the bootloader file to a computer that will be connected to the display array for the upgrade.

We do not recommend saving the bootloader file to a flash drive or a network location.

Update the Entero HB cubes

1. Open the WebUI for a display in the array, and log in with service credentials.
2. Select **Display Configuration > Bootloader Update**.
3. In the Display Grid, click **Select All**.
4. In the Bootloader Update File area, click **Choose File** and browse to the location of the bootloader update file.
5. Click **Update**.

The system is inoperable during the bootloader update. The power must not be interrupted during bootloader update process, including when the displays are being reset after the update.

6. In the confirmation window, type **CONFIRM** and click **Update**.
7. After the update is complete, click **Reset Selected Displays**.
Updated displays must be reset after updating to finalize the update process.
8. After the displays have rebooted, log back in to the WebUI and click **Display Configuration > Bootloader Update**.
9. Confirm the bootloader version running on the displays is correct.

Technical support

North and South America: +1-800-221-8025 or tech-support@christiedigital.com

Europe, Middle East, and Africa: +44 (0) 1189 778111 or techsupport-emea@christiedigital.com

Asia Pacific: tech-asia@christiedigital.com