

# Christie Touch Panel Accessory Instructions

This document provides instructions for installing a touch panel to the projector.

Use the touch panel to control the projector and perform functions such as turning on or off the light source, selecting channels, and viewing status information.

## Affected products

The following products are affected.

• CP2415-Xe	• CP4415-RGB	• CP4430-RGB	• H4D3
• CP2420-Xe	• CP4415-RGB Gen2	• CP4435-RGB	• CP4410m-RGBH
• CP4420-Xe	• CP4420-RGB	• CP2406-RBe	• CP4415m-RGBH
• CP2415-RGB	• CP4420-RGB Gen2	• CP2409-RBe	• CP4420m-RGBH
• CP2420-RGB	• CP4425-RGB	• CP2411-RBe	

## Required components

The following components are required.

- Christie Touch Panel Accessory (P/N: 163-151108-XX)


## Installing the touch panel controller

Learn how to install the touch panel controller (TPC) and connect the required harnesses for communication with the projector.




The illustrations in this document are for representation only and may not depict your model exactly.

1. Install the spacer on the rear cover.

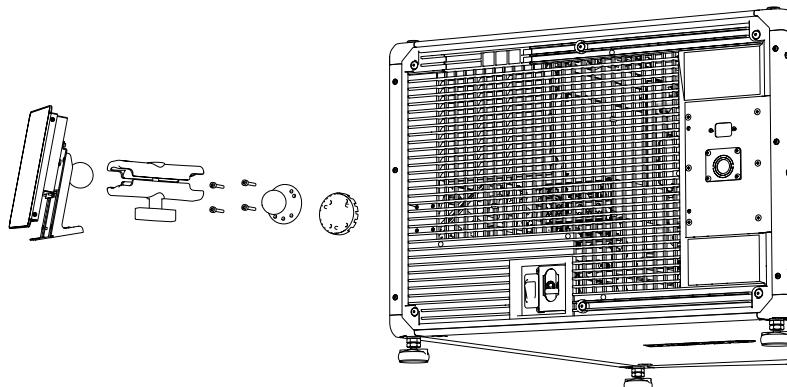

The following models do not require the spacer:

- CP2415-RGB
- CP2420-Xe
- CP4415m-RGBH
- CP2420-RGB
- CP2406-RBe
- CP4420m-RGBH
- CP2415-Xe
- H4D3
- CP4410m-RGBH

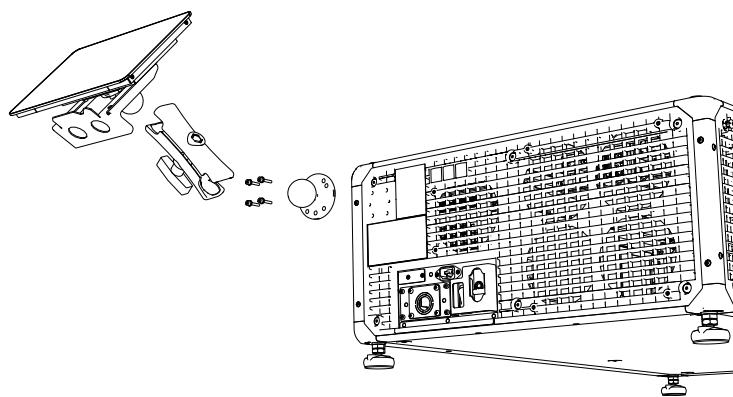

2. Install the ball arm onto the spacer.
3. To secure the ball arm, fasten with the four 25 mm screws.

CP24xx-RBe, CP24xx-Xe, CP44xx-Xe, and CP44xxm-RGBH models use the three 12 mm screws.

H4D3 models use the three 10 mm screws provided with the projector.

Torque to 20in-lb.

4. Install the TPC arm onto the ball arm.
5. Install the touch screen monitor onto the TPC arm.
6. Connect the touch screen monitor communication harness.

## Technical support

Technical support for Christie Cinema products is available at:

- [Support.cinema@christiedigital.com](mailto:Support.cinema@christiedigital.com)
- +1-877-334-4267