

LX750/LW650/LS+700

USER MANUAL

020-000158-01

CHRISTIE®

Projector

LX750/LW650/LS+700

User Manual-Concise

Thank you for purchasing this product.

Please read through this manual before using this product, in order to use safely and utilize well the product.

NOTE

* In this manual, unless any comments are accompanied, “the manuals” means all the documents provided with this product, and “the product” means this projector and all the accessories came with the projector.

WARNING

- Read all the manuals before using the product. Retain the manuals in a safe place for future reference.
- Heed all the warnings and cautions in the manuals or on the product.
- Follow all the instructions in the manuals or on the product.

Contents



1. First of all.....	2	9. Projecting images	16
1.1 Entries and graphical symbols	2	9.1 Displaying and switching the image ...	16
1.2 Important safety instructions.....	2	9.2 Focusing the image	16
1.3 Regulatory notices.....	3	9.3 Zooming the image	16
2. Checking the contents of package	5	9.4 Adjusting the projection position	17
3. Attaching the lens unit.....	5	9.5 Selecting an aspect ratio.....	17
4. Placing the projector.....	6	9.6 Correcting the keystone distortion	17
4.1 Installation environment.....	6	9.7 Hiding the projection image.....	18
4.2 Projection style.....	6	9.8 Temporarily blanking the display.....	18
4.3 Projection distance	7	10. Maintenance	19
4.4 Placement	8	10.1 Lamp unit	19
4.5 Supplementary anti-theft means	8	10.2 Filter unit.....	21
5. Connecting with your devices	9	10.3 Internal clock battery.....	22
6. Connecting to a power supply.....	12	10.4 Others	22
7. Preparing the remote control.....	13	11. Using the CD manual	23
7.1 Putting the batteries.....	13	12. Specifications	24
7.2 Transmitting condition	14	13. Troubleshooting	
7.3 Laser pointer.....	14	- Warranty and after service	26
8. Turning the projector on/off.....	15		
8.1 Turning on	15		
8.2 Turning off	15		

1. First of all

1.1 Entries and graphical symbols explanation

The following entries and graphical symbols are used for the manuals and the product as follows, for safety purpose. Please know their meanings beforehand, and heed them.


- ⚠ WARNING** This entry warns of a risk of serious personal injury or even death.
- ⚠ CAUTION** This entry warns of a risk of personal injury or physical damage.
- NOTICE** This entry notices of fear of causing trouble.

1.2 Important safety instruction

The followings are important instructions for safely using the product. Be sure to follow them always when handling the product.

⚠ WARNING

- Never use the product in or after an abnormality (ex. giving off smoke, smelling strange, took a liquid or an object inside, broken, etc.) If an abnormality should occur, unplug the projector urgently.
- Situate the product away from children and pets.
- Do not use the product when there is fear of a thunderbolt.
- Unplug the projector from the power outlet if the projector is not used for the time being.
- Do not connect the projector to a power supply while no lens unit is attached to it.
- Do not open or remove any portion of the product, unless the manuals direct it. For internal maintenance, leave it to your dealer or their service personnel.
- Use only the accessories specified or recommended by the manufacturer.
- Modify neither the projector nor accessories.
- Let neither any things nor any liquids enter to the inside of the product.
- Do not wet the product.
- Apply neither a shock nor pressure to this product.
 - Do not place the product on an unstable place such as the uneven surface or the leaned table.
 - Do not place the product unstably. Place the projector so that it (even the lens part installed) does not protrude from the surface where the projector is placed on.
 - Always move the projector with two or more people. Place your hands in the dented parts on the bottom of the projector when carrying the projector.
 - Remove all the attachments including the power cord and cables, from the projector when carrying the projector.
 - Do not lengthen the elevator feet exceeding 30 mm.
- Do not look into the lens and the openings on the projector, while the lamp is on.
- Do not approach the lamp cover and the exhaust vents, while the projection lamp is on. Also after the lamp goes out, do not approach them for a while, since too hot.
- Do not apply the laser beam of the remote control to anything except the screen.

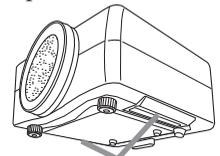

Dented parts

1.3 Regulatory notices

About Electro-Magnetic Interference

WARNING :

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

In the US

Declaration of Conformity

Trade name: CHRISTIE
 Model Number: LX750/LW650/LS+700
 Responsible Party: Christie Digital Systems USA, Inc.
 Address: 10550 Camden Drive, Cypress CA 90630 U.S.A.
 Telephone Number: +1-800-407-7727

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

In Canada

NOTICE: This Class A digital apparatus complies with Canadian ICES-003.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Some cables have to be used with the core set. Use the accessory cable or a designated type cable for the connection. For cables that have a core only at one end, connect the core to the projector.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1.3 Regulatory notices (continued)

About Waste Electrical and Electronic Equipment



The mark is in compliance with the Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE).


The mark indicates the requirement NOT to dispose the equipment including any spent or discarded batteries or accumulators as unsorted municipal waste, but use the return and collection systems available.

If the batteries or accumulators included with this equipment, display the chemical symbol Hg, Cd, or Pb, then it means that the battery has a heavy metal content of more than 0.0005% Mercury or more than, 0.002% Cadmium, or more than 0.004% Lead.

2. Checking the contents of package

Soon after purchasing this product, check that all the following items are included in the package. If any items should be missing, tell your dealer immediately.

- (1) Projector
- (2) Lens adapter
- (3) Hexagon wrench
(for installation of the optional lens unit)
- (4) Power cord
- (5) Computer cable
- (6) Remote control with two batteries
- (7) User's manuals (a book and a CD)
- (8) Security label

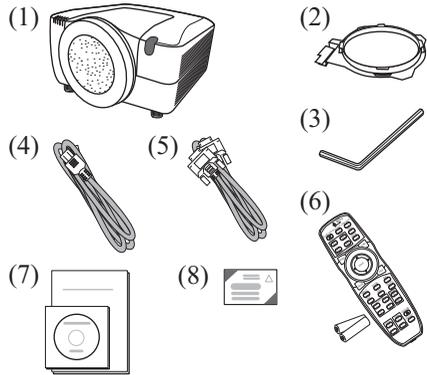

NOTE

- * This product is supplied without a lens unit, so that you can choose from a range of lenses that can meet your requirements. Ask your dealer about details, and prepare one or more lens unit together with this product.
- * Some additional accessories or services may be required for your use. We recommend consult with your dealer beforehand.

⚠ CAUTION

- Keep the original packing materials, and use them correctly when transporting or storing the product.

3. Attaching the lens unit

Request your dealer to install the lens unit in the projector. Be sure to leave both removing and attaching the lens unit to the service personnel your dealer sent.

⚠ WARNING

- Use only the lens unit specified by the manufacturer.
- Leave both attaching and removing the lens unit to the service personnel your dealer sent.
- Read and keep the user's manual of the lens unit.
- Use special caution not to drop the lens unit or knock it against something.
- Do not transport the projector to which the lens unit is attached.

⚠ CAUTION

- Keep the original packing materials for the lens unit, and use them correctly when transporting or storing the lens unit.

NOTICE

- Do not touch the lens surface directly.
- Keep the dust protector of the projector, and use it when no lens unit is attached to the projector.

4. Placing the projector

Read this chapter through first. Then install the projector into place.

4.1 Installation environment

This product requires an installing place that is stable, cool and airy. Check your installation environment in accordance with the following.

⚠ WARNING

- Do not place the product on an unstable surface such as an uneven, tilted, or vibrating place.
- Do not place the product near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub; in a wet basement, near a swimming pool, beach; or outdoors.

⚠ CAUTION


- Do not place the product in a dusty, smoky, or humid place - for example, on a passage, in a smoking space, in a kitchen, or outdoors.
- Do not place the product near heat sources - for example, radiators, heat registers, stoves, or other product (including amplifiers) that produces heat.
- Do not place this product in a magnetic field.

NOTICE

- Do not place the product in a place where radio interference may be caused.
- Do not place the projector in a place where any strong lights hit the remote sensors.

4.2 Projection style

Choose the projection style suitable to your use, referring to the illustration below.

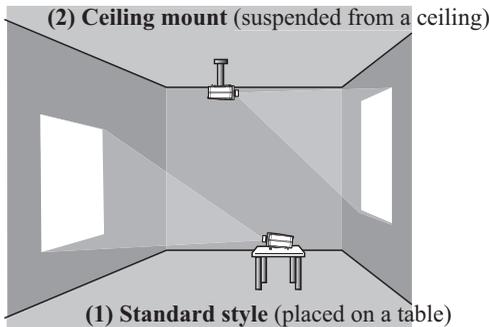

NOTE

* For the case of installation in a special state such as ceiling mount, the specified mounting accessories and service may be required. Before installing the projector, consult your dealer about your installation.

⚠ WARNING

- Consult with your dealer about installation beforehand.
- Use only the mounting accessories the manufacturer specified, and leave installing and removing the projector with the mounting accessories to the service personnel.
- Read and keep the user's manual of the mounting accessories used.

4.3 Projection distance

See the user's manual of your lens unit for your case.

NOTICE

- Do not use a polarized screen, since it can cause a red image.

4.4 Placement

Heed the followings and place the projector into the place in accordance with the preceding paragraph 4.3.

⚠ WARNING

- Keep the projector away from anything that is easy to catch fire.
- Do not block or cover the openings on the projector, and keep sufficiently space for ventilation around the projector.
 - Do not use the projector on a cushiony surface such a rug, a carpet or bedding.
 - Keep the projector away from any light materials such as a piece of paper that can stick to the intake holes.
- Do not use the projector on an unstable stand such as a cart.
- Place the projector so that nothing enters to the inside of the projector.
 - Keep the projector away from any small things such as paperclips that can fall into the inside.
 - Keep the projector away from any liquids that can spill or leak into the product.

⚠ CAUTION

- Keep the projector away from anything that is heat conductive such as metal.
 - Do not use the projector on a metallic table.
- Keep the projector away from anything that is weak in heat such as some kinds of plastics.

NOTICE

- Place the projector so that there is nothing that blocks the projection light to the screen.
- Avoid exposing directly the remote sensor to any strong lights.


4.5 Supplementary anti-theft means

This projector has the security bar for a commercial anti-theft chain or wire up to 10 mm in diameter, and also the security slot for the Kensington lock.

For details, see the manual of your security tool.

NOTE

* These are not provided as comprehensive theft preventions but supplemental measures.

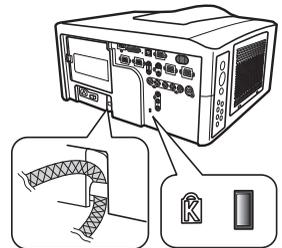

⚠ WARNING

- Do not use the security slot for the purpose of fall prevention, since these are not designed for it.

⚠ CAUTION

- Do not place the anti-theft chain or wire near the projector's exhaust vents, since the chain or wire heated by the hot exhaust gas may cause burns.

5. Connecting with your devices

Before connecting the projector to your devices, check the manual of the device in order to make sure that the device is suitable to connect with this projector and to check what is required for the connection.

Consult your dealer when the required accessory did not come with the product or the accessory is damaged. It may be regulated under some standard.

After making sure that the projector and the devices are turned off, perform the connection, according to the following instructions. Refer to the figures in subsequent pages.

NOTE

* For this product, the optional cable cover is ready to be purchased. To place an order for it, please tell your dealer the type name of it.

⚠ WARNING

- Use only the accessories specified or recommended by manufacturer. Modify neither a projector nor accessories.
- Read and keep the user's manual of the accessories used.
- Do not connect or disconnect the projector with devices while they are connected to a power supply except for the cases directed by the manuals of devices.

⚠ CAUTION


- Some connecting cable may have to have a specific length, or a ferrite core at the end to connect to the projector, under the regulation of electro-magnetic interference. When a ferrite core is attached to the specified cable only at one end, connect to the projector the end that the ferrite core is attached at.
- Be careful not to set a connector into a wrong port or with a wrong way.
- Be careful not to damage the cables. Route the cables not to be stepped on and pinched out.

NOTICE


- Do not turn your device on prior to the projector, except for the cases directed by the manuals of devices.

5. Connecting with your devices (continued)

Example of connecting with VCR or DVD players

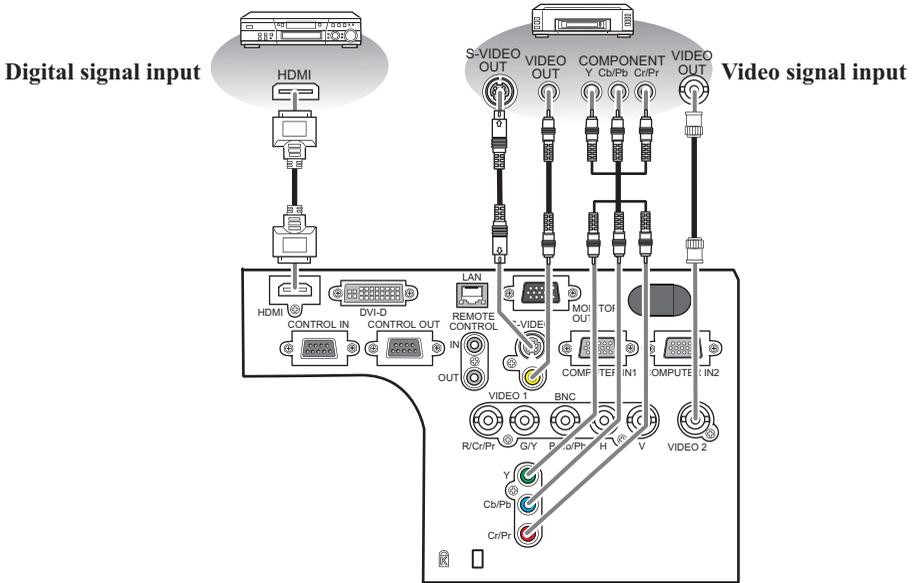

Example of connecting with computers

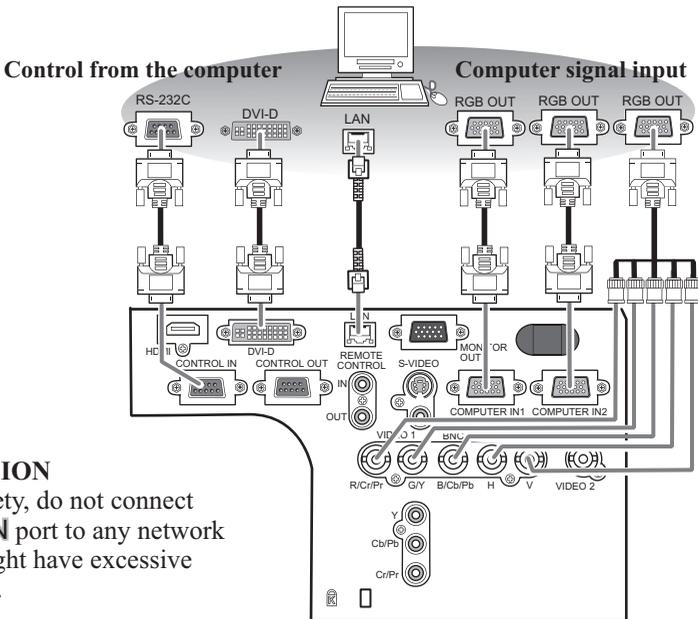


⚠ CAUTION

- For safety, do not connect the **LAN** port to any network that might have excessive voltage.

5. Connecting with your devices (continued)


Example of connecting with another projector or a display device

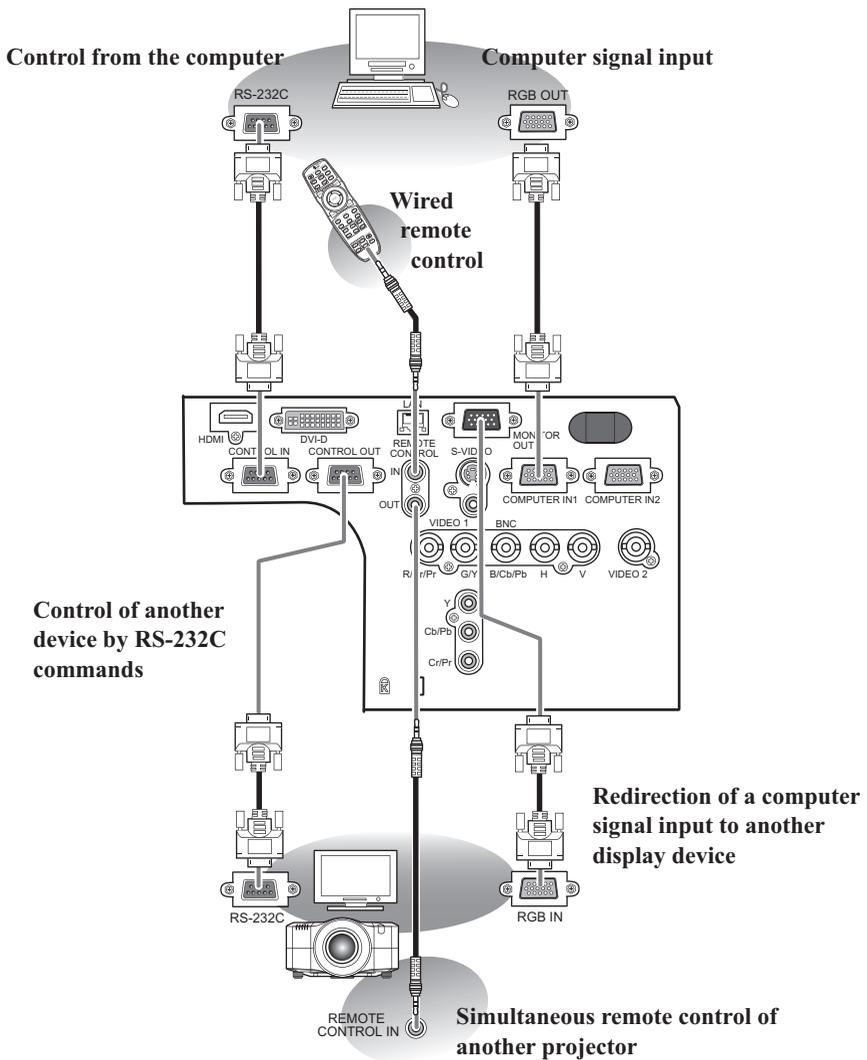

6. Connecting to a power supply

In accordance with the warnings shown below, connect the AC inlet of the projector to the proper power outlet. The following walks you through the connection.

1. Make sure that the power switch of the projector is set to the off-position (marked with “O”).
2. Insert the socket end of the power cord into the **AC IN** (AC inlet) of the projector.
3. Plug the other end of the power cord into the power outlet.

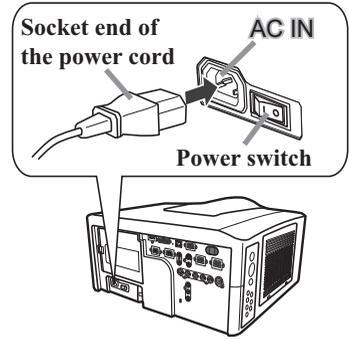

⚠ WARNING

- Do not connect the projector to a power supply when the lens unit is not attached.
- Use this projector from only the specified power supply in accordance with the label indication on the projector.
- Use a power outlet that is close to the projector and easily accessible.
- Do not overload the outlet, since overloading can result in a fire or an electric shock.
- Use only the power cord that came with this product and is suitable for your power supply. If the suitable power cord did not come with this product, consult your dealer.
- Do not use a damaged power cord. If the power cord you need is damaged, ask your dealer for a new power cord of the same type.
- Do not handle the power cord with wet hands.
- Do not repair or modify the power cord.
- Be careful not to damage the power cord. Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them.
- Connect firmly the power cord not to result in loose connection. Do not use a loose or unsound power outlet.

7. Preparing the remote control

Use the remote control that came with the product. Load the batteries into the remote control after reading this chapter through.


7.1 Putting the batteries

The remote control needs the two batteries of the following type.

HITACHI MAXELL, part number **LR6** or **R6P**

The batteries that came with the product are the type suitable to this remote control. The following walks you through loading batteries into the remote control.

1. Remove the battery cover in the back of the remote control. Push lightly the knob of the battery cover while pulling it up.
2. Put the batteries into the battery holder, according to the polarity markings “+” and “-“ inside the holder.
3. Put the battery cover back into place until it clicks.

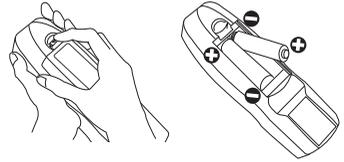

NOTE


* If the remote control malfunctions, try replacing the batteries with fresh ones.

⚠ WARNING

- Be careful not to press the **LASER** button when loading the batteries. It is dangerous if a laser beam is unintentionally turned on. See the warning in the following paragraph 7.3.
- Be careful of handling batteries, since a battery can cause explosion, cracking or leakage that could result in a fire, injury, or environment pollution.
 - Use only the specified batteries. Do not use batteries of different types.
 - When replacing the batteries, replace both of the batteries with new batteries of the same type. Do not use a new battery with a used battery.
 - Do not use a battery with damage, such as scratches, dents, rust or leakage.
 - Make sure the plus and minus terminals are correctly aligned when loading a battery.
 - Do not work on a battery; for example recharging or soldering.
 - If the remote control is not used for a long period of time, remove the batteries.
 - Keep batteries in a dark, cool and dry place. Never expose a battery to a fire or water.
 - Keep batteries away from children and pets.
 - When a battery leaked, wipe the leakage out well with a waste cloth. If the leakage adhered to your body, immediately rinse it well with water. When a battery leaked in the battery holder, replace the batteries after wiping the leakage out.
 - Obey the local laws on disposing a battery.


7.2 Transmitting condition

The remote control works with the remote sensors on the projector using infrared light (Class 1 LED). The remote sensor senses the remote control signals reached into the range within 60 degrees (to right and left) and 3 meters about from the sensor.

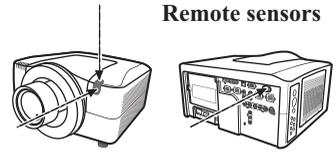

NOTE

- * You can inactivate one or two sensors from the three sensors using the item **REMOTE RECEIVE.** of the **SERVICE** menu under the **OPTION** menu.
- * When you want to use two or more projectors of this type at the same time and the same place, utilize the **REMOTE ID** function. The buttons of **ID 1, ID 2, ID 3** and **ID 4** on the remote control can name the projector given the same ID number as the button by the item **REMOTE ID** of the **SERVICE** menu under the **OPTION** menu.

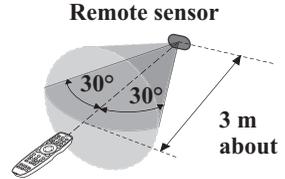


NOTICE

- Avoid exposing directly the remote sensor to any strong lights.
- Do not put anything between the remote control and the remote sensor on the projector, since it may interfere with transmission of the remote control signals.

7.3 Laser pointer

While pressing the **LASER** button, the remote control emits a laser beam and lights the **LASER INDICATOR**. Use the laser beam as the pointer on the screen.

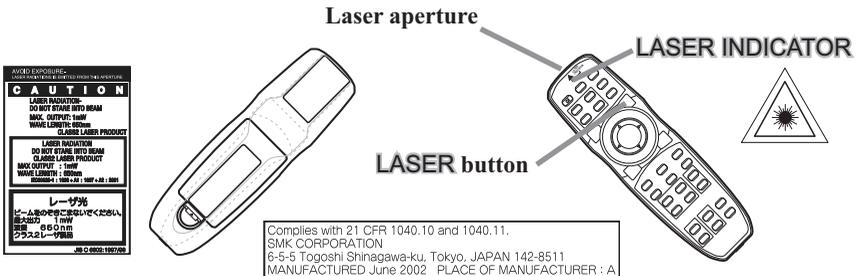


⚠ WARNING

- Use the laser beam of the remote control only for the pointer on the screen. Do not apply the laser beam to anything except the screen.
 - Never hit eyes by the laser beam since the laser beam can injure eyes.
 - Do not apply the laser beam to anything except the screen.

8. Turning the projector on/off

8.1 Turning on

1. Make sure that the power cord is firmly and correctly connected to the projector and the outlet.
2. Press down the side marked “I” on the power switch.
The **POWER** indicator will light up in steady orange. Wait for the buttons to become ready. It may take several seconds.
3. Press the **STANDBY/ON** button (on the projector or the remote control).
The projection lamp will light up and the **POWER** indicator will begin blinking in green. When the power is completely on, the indicator will stop blinking and light in steady green.

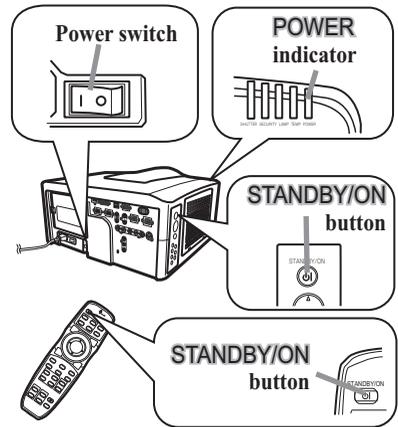

8.2 Turning off

1. Press the **STANDBY/ON** button on the projector or the remote control.
The message “**Power off?**” will appear on the screen for about 5 seconds.
2. Press the **STANDBY/ON** button again while the message is shown.
The projector lamp will go off, and the **POWER** indicator will begin blinking in orange.
Then the **POWER** indicator will stop blinking and light in steady orange when lamp cooling is complete.
3. After making sure that the **POWER** indicator lights in steady orange, and press down the side marked “O” on the power switch.
The **POWER** indicator will go off.

NOTE

- * When the item **DIRECT ON** of the **OPTION** menu is set to the **ON**, and that the projector was turned off by only the power switch without using the **STANDBY/ON** button, switching the power switch turns the projector automatically.

⚠ WARNING


- Do not look directly into the lens or the openings on the projector while the lamp is on.
- Do not approach the lamp cover and the exhaust vents for a while after the lamp goes out, since they may be hot and could cause burns.

NOTICE

- Do not turn your device on prior to the projector, except for the cases directed by the manuals of devices. Turn your device off prior to the projector, except for the cases directed by the manuals of devices.

9. Projecting images

The basic operation of this product is shown in this chapter. For details, please refer to the manuals in the CD “User’s Manual (detailed)” (📖 23).

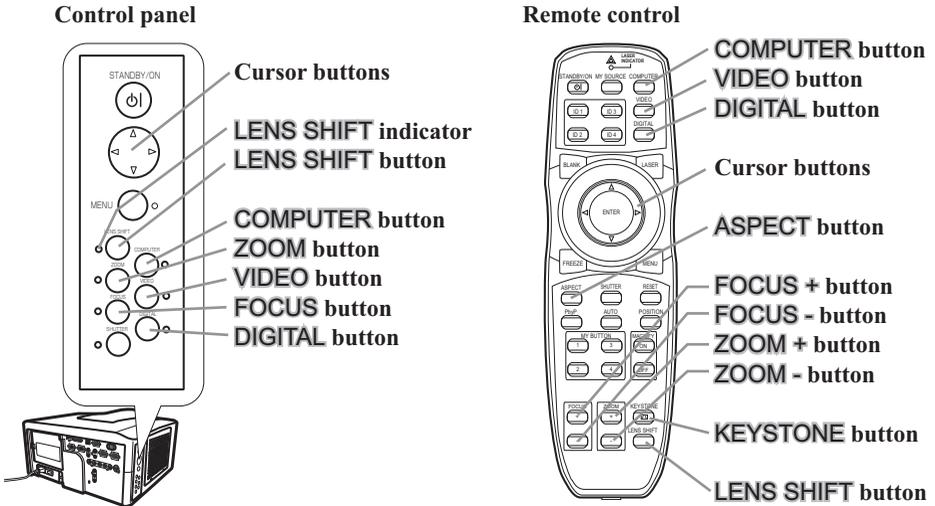

9.1 Displaying and switching the image

Pressing one of the following buttons (on the control panel or the remote control) calls the picture signal from one of the input ports belonging to the category the button’s name shows. And repeating and pressing the same button changes the port to take in the signal from in the order shown below.

- (1) **COMPUTER** button: **COMPUTER IN1** → **COMPUTER IN2** → **BNC**
- (2) **VIDEO** button: **Component (Y, Cb/Pb, Cr/Pr)** → **S-VIDEO** → **VIDEO 1** → **VIDEO 2**
- (3) **DIGITAL** button: **HDMI** ↔ **DVI-D**

9.2 Focusing the image

- (1) On the control panel, press the **FOCUS** button first, then use the ◀/▶ cursor buttons to adjust.
- (2) On the remote control, use the **FOCUS +/FOCUS –** buttons to adjust.

9.3 Zooming the image

- (1) On the control panel, press the **ZOOM** button first, then use the ◀/▶ cursor buttons to adjust.
- (2) On the remote control, use the **ZOOM +/ZOOM –** buttons to adjust.

9.4 Adjusting the projection position

Using the elevator feet


Lengthening or shortening the length of the elevator feet shifts the projection position and the projection angle. Turn the elevator feet each to adjust their length.

⚠ WARNING

- Do not lengthen the elevator feet exceeding 30 mm. The foot lengthened exceeding the limit may come off and drop the projector down, and result in an injury or damaging the projector.

⚠ CAUTION

- Do not place the projector with an inclination exceeding 5 degrees. The projector leaned exceeding the limit could cause malfunction and shorten the life of the projector.

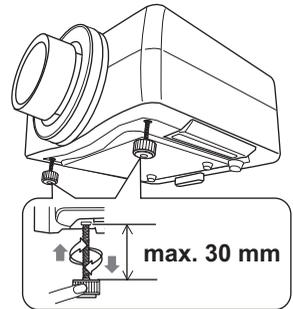

Adjusting the lens position

Shifting the lens position shifts the projection position.

After pressing the **LENS SHIFT** button (on the control panel or the remote control), use the cursor buttons to shift the lens position.

NOTE

- * While the lens is moving, the **LENS SHIFT** indicator (on the control panel) lights up or blinks green. The projector may ignore operation by buttons while moving the lens.
- * Generally, better image quality can be got when the lens is set to the center.

⚠ CAUTION


- Do not put your fingers or any other things around the lens. The moving lens could catch them in the space around the lens and result in an injury.

9.5 Selecting an aspect ratio

Use the **ASPECT** button (on the remote control). Each time you press the button, it changes the aspect ratio of the image in turn.

9.6 Correcting the keystone distortion

Pressing the **KEYSTONE** button (on the remote control) displays the **KEYSTONE** dialog. Use the cursor buttons according to the dialog, checking the image.

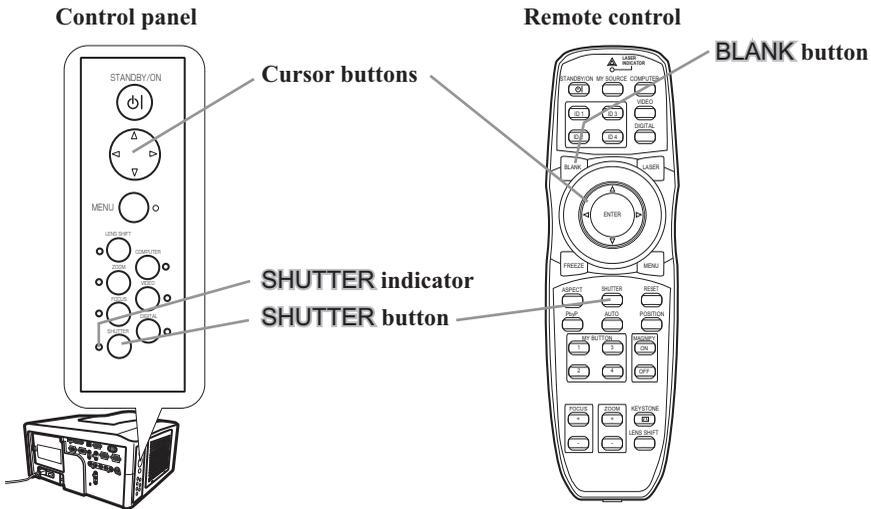

9.7 Hiding the projection image

Closing the mechanical lens shutter blocks the projection light, and black out the screen keeping the projection state. If you use another monitor device, you can operate the display, hiding it from the audience.

Press the **SHUTTER** button (on the control panel or the remote control) to close, or open the lens shutter.

NOTE

- * While the lens shutter is closed, the **SHUTTER** indicator (on the control panel) blinks yellow.
- * Even if the projector is turned off with the lens shutter closed, turning the projector on opens automatically the lens shutter.

⚠ WARNING

- Do not leave the shutter closed for a long time while using the projector, since the closed lens shutter could raise the inside temperature, and result in even a fire.

9.8 Temporarily blanking the display

Using the **BLANK** button, you can display the **BLANK** image preset by the item **BLANK** of the **SCREEN** menu instead of the image from the input signal.

Press the **BLANK** button (on the remote control), to display the **BLANK** image, or recover the image from the input signal.

NOTE

- * Some operation of the projector may recover the image from the input signal automatically.

10. Maintenance

Before taking care of the projector, be sure to turn off, unplug, and cool down it. Especially for maintenance of the lamp unit, allow the projector to cool for 45 minutes about.

10.1 Lamp unit


A worn out lamp bulb could burn or burst. It is recommended to keep a spare lamp unit on hand and to replace the lamp unit when the projected image darkens or color reproduction becomes poor.

To prepare the spare, contact your dealer and tell the following type number.


Type number of the optional lamp unit: **00X-00XXXX-01 (DT01001)**

If the projector is installed in a special state such as ceiling mount, or if the lamp bulb has broken, also ask the dealer to replace the lamp unit. Otherwise, follow the procedure shown below to replace the lamp unit.

1. Make sure that the projector is unplugged and cooled down.
2. Loosen the screw (marked by arrow) of the lamp cover. Then slide and take it off.
3. Loosen the 3 screws (marked by arrow) of the lamp unit. Then picking the handles of the unit, gently take it from the projector.
4. Gently set the new lamp unit into place. Then retighten the screws of the lamp unit.
5. Put the lamp cover back into place, and retighten the screw of the lamp cover.
6. Reset the **LAMP TIME** value.
 - (1) Turn the projector on.
 - (2) To display the **ADVANCED MENU**, press the **MENU** button (on the control panel or the remote control). On the **EASY MENU**, select the **“ADVANCED MENU”** using the **▲/▼** cursor buttons, then press the **▶** cursor button.
 - (3) To select the **OPTION** menu, select the **“OPTION”** using the **▲/▼** cursor buttons in the left column, then press the **▶** cursor button.
 - (4) To display the **LAMP TIME** dialog, select the **“LAMP TIME”** using the **▲/▼** cursor buttons in the right column, then press the **▶** cursor button.
 - (5) Use the **▶** cursor button according to the dialog, Selecting **“OK”** resets the **LAMP TIME** value.


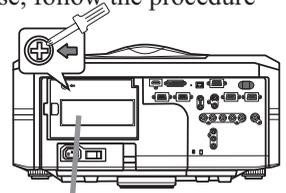


Lamp cover

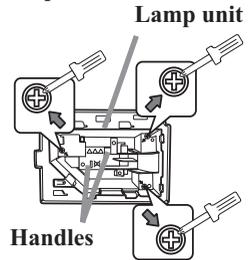

Lamp unit

Handles

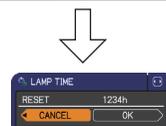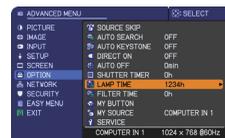

NOTE

- * The value shown on the **OPTION** menu as the **LAMP TIME** is the use time that is counted since the last time the **LAMP TIME** was reset. Refer to the value for proper maintenance.

NOTICE

- Be sure to reset the **LAMP TIME** only when you have replaced the lamp unit.

⚠ WARNING

⚠ HIGH VOLTAGE ⚠ HIGH TEMPERATURE ⚠ HIGH PRESSURE

- The projector uses a high-pressure mercury glass lamp. The lamp can break with a loud bang, or burn out, if jolted or scratched, handled while hot, or worn over time. Note that each lamp has a different lifetime, and some may burst or burn out soon after you start using them. In addition, when the bulb bursts, it is possible for shards of glass to fly into the lamp housing, and for gas containing mercury to escape from the projector's vent holes.
- **About disposal of a lamp:** This product contains a mercury lamp; do not put it in a trash. Dispose of it in accordance with environmental laws.
 - For lamp recycling, go to www.lamprecycle.org (in the US).
 - For product disposal, contact your local government agency or www.eiae.org (in the US) or www.epsc.ca (in Canada).

For more information, call your dealer.



Disconnect the plug from the power outlet

- If the lamp should break (it will make a loud bang when it does), unplug the power cord from the outlet, and make sure to request a replacement lamp from your local dealer. Note that shards of glass could damage the projector's internals, or cause injury during handling, so please do not try to clean the projector or replace the lamp yourself.
- If the lamp should break (it will make a loud bang when it does), ventilate the room well, and make sure not to breathe the gas that comes out of the projector vents, or get it in your eyes or mouth.
- Before replacing the lamp, turn the projector off and unplug the power cord, then wait at least 45 minutes for the lamp to cool sufficiently. Handling the lamp while hot can cause burns, as well as damaging the lamp.



- Never unscrew except the appointed (marked by an arrow) screws.
- Do not open the lamp cover while the projector is suspended from a ceiling. This is dangerous, since if the lamp's bulb has broken, the shards will fall out when the cover is opened. In addition, working in high places is dangerous, so ask your local dealer to have the lamp replaced even if the bulb is not broken.
- Do not use the projector with the lamp cover removed. At the lamp replacing, make sure that the screws are screwed in firmly. Loose screws could result in damage or injury.



- Use only the lamp of the specified type.
- If the lamp breaks soon after the first time it is used, it is possible that there are electrical problems elsewhere besides the lamp. If this happens, contact your local dealer or a service representative.
- Handle with care: jolting or scratching could cause the lamp bulb to burst during use.
- Using the lamp for long periods of time, could cause it to darken, not to light up or to burst. When the pictures appear dark, or when the color tone is poor, please replace the lamp as soon as possible. Do not use old (used) lamps; this is a cause of breakage.

10.3 Internal clock battery

This projector is being loaded with a battery for the internal clock that the network function needs. When the clock does not work correctly, request your dealer to check the battery and to replace if needed. For replacement, prepare a new battery of the following type. You can buy it at the store or order it from your dealer.

HITACHI MAXELL, part number **CR2032** or **CR2032H**

⚠ WARNING

- Be careful of handling battery, since a battery can cause explosion, cracking or leakage that could result in a fire, an injury, and environment pollution.
- Use only the specified battery.
- When replacing the battery, replace it with a new battery.
- Do not use a battery with damage, such as scratches, dents, rust or leakage.
- Do not work on a battery; for example recharging or soldering.
- Keep a battery in a dark, cool and dry place. Never expose a battery to a fire or water.
- Keep a battery away from children and pets. Be careful for them not to swallow a battery.
- When a battery leaked, wipe the leakage out well with a waste cloth. If the leakage adhered to your body, immediately rinse it well with water. When a battery leaked in the battery holder, replace the batteries after wiping the leakage out.
- Obey the local laws on disposing a battery.

10.4 Others

For the lens

Be careful not to scratch, crack, dirty, or fog the lens surface, since it affects the image quality. When the lens surface is fogged or dirty, gently wipe it only with the commercial cloth or paper lens cleaner.

For the inside of the projector

In order to ensure the safe use of your projector, please have it cleaned and inspected by your dealer about once every year.

For the cabinet of the projector and remote control

For the dirty cabinet of the projector or remote control, use soft cloth. Dip a soft cloth in water or a neutral cleaner diluted in water, and wipe the cabinet lightly after wringing it well. Then, wipe again lightly with a soft and dry cloth.

⚠ WARNING

- Before checking or cleaning the lens, turn off, unplug, and cool down the projector.
- Do not scratch the projector and knock it against something. Use special caution for the lens surface.
- Do not wet the product. Do not let any liquids enter to the inside. Do not use a spray.

NOTICE

- Do not directly touch the lens surface with hands.
- Do not use cleaners or chemicals other than those specified in this manual.

11. Using the CD manual

The detailed manuals for this product are written into the CD titled “**User’s Manual (detailed)**” which came with this product. Before using the CD, read the following to ensure the proper use.

System requirements

For using the CD manual, the following system is required.

Windows®:	OS:	Microsoft® Windows® 98, Windows® 98SE, Windows NT® 4.0, Windows® Me, Windows® 2000/Windows® XP, or the later
	CPU:	Pentium® processor 133MHz / Memory: 32MB or more
Macintosh®:	OS:	Mac OS® 10.2 or the later
	CPU:	PowerPC® / Memory: 32MB or more
CD-ROM drive:		4x CD-ROM drive
Display:		256 color / 640x480 dots resolution
Applications:		Microsoft® Internet Explorer® 4.0 and Adobe® Acrobat® Reader® 4.0 or the later

How to use the CD

1. Insert the CD into the CD-ROM drive of your computer.
2. When using it on the Macintosh® system, start the web browser by the following.
 - (1) Double-click on the “**Projectors**” icon displayed on the computer’s desktop.
 - (2) Then click on the “**main.html**” file.

When using it on the Windows® system, the web browser automatically starts.

3. The web browser displays the initial window of the manual.

On the window, select the model name of your projector, and the language you want to read the manuals with. The manual in the selected language will open.

NOTE

- * The information in the CD is subject to change without notice.
- * The manufacturer assumes no responsibility for any obstacle and defect to hardware and software of your computer as a result of the use of the CD.
- * The reproduction, transfer or copy of all or any part of the information in the CD is not permitted without express written consent.

⚠ CAUTION


- Only use the CD in a computer’s CD drive. Never insert the CD into a CD drive of a non-computer device such as an audio device. Inserting the CD into an incompatible CD drive may produce a loud noise, which may result in damage to ears and speakers.
- While the CD is not used, put it into its envelope. Avoiding the CD from direct rays, a high temperature, and high humidity. Be careful not to scratch or press the CD.

12. Specifications

The general specifications of this product are shown below.

Item		Specifications
Product name		Liquid crystal projector
		TFT active matrix drive system
Liquid crystal panel	LX750	3.3 cm (1.3 type), 786,432 pixels (1024 horizontal x 768 vertical)
	LW650	3.1 cm (1.22type), 1,092,800 pixels (1366 horizontal x 800 vertical)
	LS+700	3.3 cm (1.3 type), 1,470,000 pixels (1400 horizontal x 1050 vertical)
Lamp		350 W UHB
Power supply		AC 110-120V/6.0A, AC 220-240V/3.1A
Power consumption		540W
Temperature range		5 to 35°C (Operating)
Ports		HDMI HDMI jack x1 DVI-D DVI-D jack x1 LANRJ45 jack x1 MONITOR OUTD-sub 15 pin mini jack x1 CONTROL IN D-sub 9 pin plug x1 CONTROL OUT D-sub 9 pin plug x1 REMOTE CONTROL IN3.5 stereo mini jack x1 REMOTE CONTROL OUT3.5 stereo mini jack x1 S-VIDEO DIN 4 pin mini jack x1 VIDEO 1RCA jack x1 VIDEO 2BNC jack x1 COMPUTER IN1D-sub 15 pin mini jack x1 COMPUTER IN2D-sub 15 pin mini jack x1 BNC (R/Cr/Pr, G/Y, B/Cb/Pb, H, V)BNC jack x5 Component (Y, Cb/Pb, Cr/Pr)RCA jack x3
Weight (mass)		13.1 kg approx.
Size		476 (W) x 272 (H) x 469 (D) mm approx. * See the drawing below.
Optional parts	Lamp unit	00X-00XXXX-01 (DT01001)
	Filter unit	00X-00XXXX-01 (MU06351)

12. Specifications (continued)

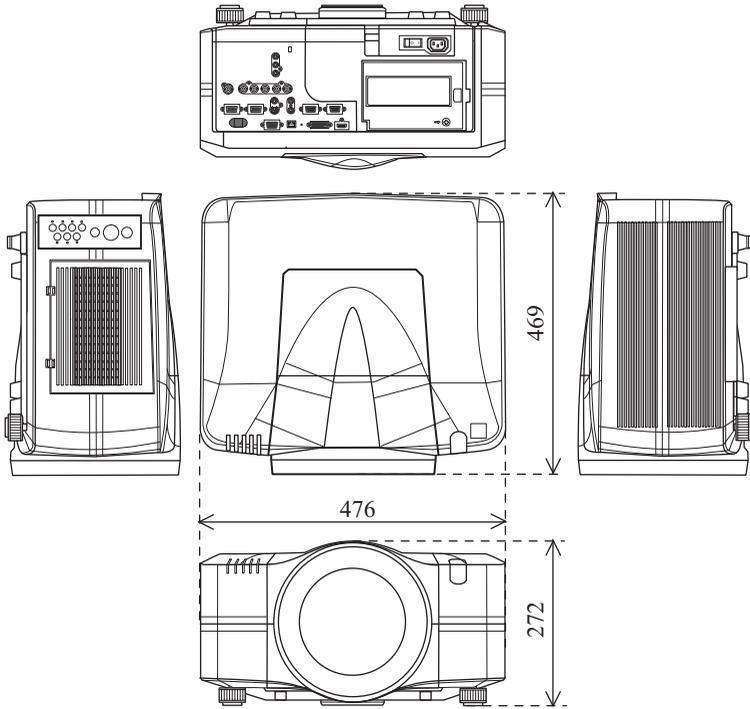

[unit: mm]

13. Troubleshooting – Warranty and after service

If an abnormality (ex. giving off smoke, smelling strange, took a liquid or an object inside, broken) should occur on this product, stop using the projector urgently. After making sure of no emergency, ask your dealer to check and repair the product.

In a case of a problem without such an abnormality, please refer to the “Troubleshooting” of the Operating Guide in the CD first. It may give you suggestions about how to resolve the problem. If it does not resolve the problem, consult your dealer.

The dealer or the service company that is designated by your dealer will tell you what warranty condition is applied.

Please check the following web address where you may find the latest information for this product.

<http://www.christiedigital.com>

NOTE

- * The information in the manuals is subject to change without notice.
- * The manufacturer assumes no responsibility for any errors that may appear in the manuals.
- * The reproduction, transfer or copy of all or any part of the manuals is not permitted without express written consent.

Trademark acknowledgment

All the trademarks are the properties of their respective owners.

According to the indication on the official site of each company, we describe as follows.

- Macintosh® and Mac OS® are registered trademark of Apple Inc.
- Pentium® is registered trademark of Intel Corp.
- Microsoft® and Internet Explorer®, Windows®, Windows NT® are registered trademarks of Microsoft Corporation in the U.S. and/or other countries.
- Adobe® and Acrobat®, Reader® are registered trademarks of Adobe System Incorporated.
- PowerPC® is a registered trademark of International Business Machines Corporation.
- DVI is a trademark of Digital Display Working Group.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.